

CLAMCLEAT UPGRADE KIT



How to install the clamcleat adjuster on
your Infinity 3.0 Airstyle Pull-Pull Bar




FLYSURFER
KITEBOARDING

This Upgrade Kit enables you to equip your INFINITY 3.0 Airstyle Pull-Pull Bar with a Clamcleat Adjuster.


The Upgrade Kit includes the components shown below. Some parts from the Pull-Pull System will be reused.

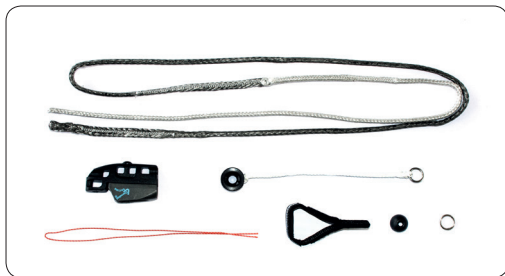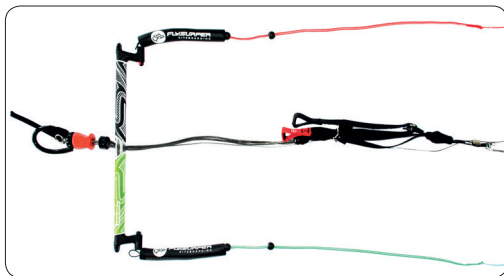


1. Disconnect the big steel ring from the safety-endline – keep it for assembling the Clamcleat Adjuster. Pull the safety-endline through the Quick Release, bar eyelet and guidance block and set it down within reach.

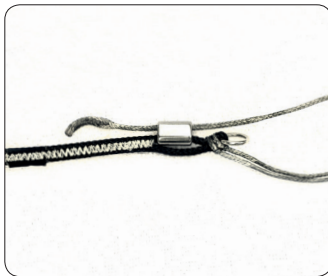

2. Disconnect the front lines from the Pull-Pull Adjuster. Next open the knot from the depower line and remove the Pull-Pull Adjuster as well as the Quick Release.

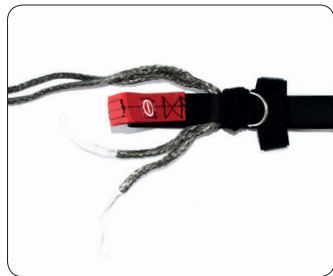

3. After disassembling the Pull-Pull Adjuster, the following components should be spread out.

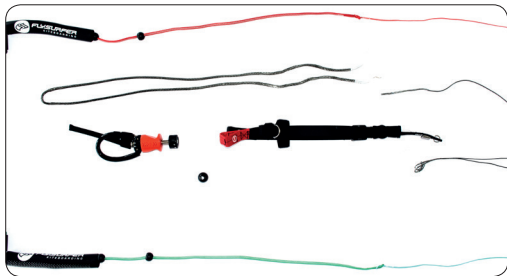


4. Keep the following components within reach for the assembly of the clamcleat trimmer.




5. Pull the end of the depower line through the clamcleat as shown in the picture below. Using the red thin line, pull the end of the adjuster line through the loop of the depower line. Tighten the connection.



6. It is not essential, but if you prefer a stopper ball, add it to the adjuster line. Pull the line through the upper bar eyelet as shown below. Connect it to the Quick Release and thread the line through the lower bar eyelet hole.

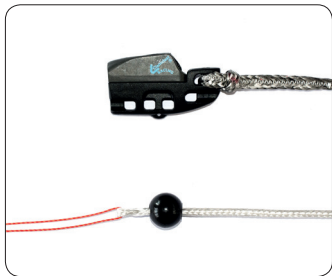

7. Some patience may be required when threading the line through the Quick Release. Pull the depower line until the line connection is parallel with the clamcleat. Pull the adjuster line back through the stopper ball, if you have added it.

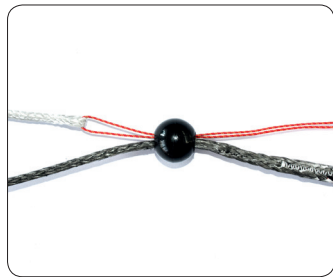


8. Observe the position of the clamcleat. Push the adjuster line through the first hole in the base and add the small steel ring. Pull the line through the other holes as shown. Tighten the line when you reach the line connection.





9. Pull the adjuster line through the low-friction ring of the depower leader line. Next pull the adjuster line through the clamcleat. Add the small plastic ball with the large opening facing the end of the adjuster line.




10. Make a loose knot on the adjuster line and pull the adjuster line through the handle. Add a knot to the end of the line to fix the handle (tail length = 10 mm). Fasten the first knot at a position 20 mm behind the handle.

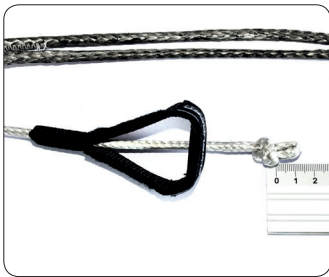

11. Remount the front lines to the depower leader line using a larks head knot. Guide the safety-endline through the steel rings and then through the bar eyelet.

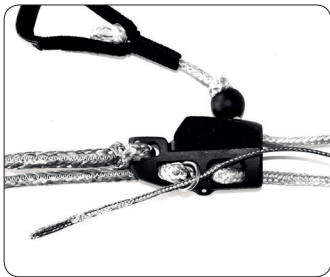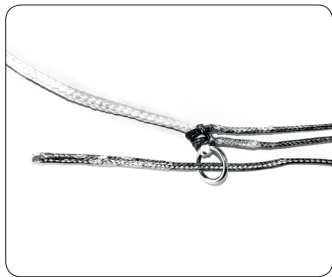

12. Using the red thin line, push the safety-endline through the Quick Release. Finally, reconnect the end of the safety endline to the steel ring using a larks head knot. Now your Airstyle Control Bar is ready for kiting again.

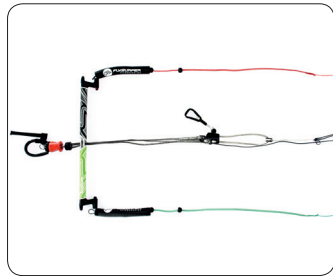

FAAS1CCUK



FLYSURFER
KITEBOARDING

FLYSURFER Kiteboarding
Brand of Skywalk GmbH & Co. KG
Windeckstr. 4
83250 Marquartstein, GERMANY



flysurferkiteboarding | www.flysurfer.com | info@flysurfer.com | +49 (0) 86 41 69 48 - 30