08 RELEASE OF LIABILITY

By assembling and/or using this FLYSURFER product, you agree that you have read and understood the entire FLYSURFER product manual, including all instructions and warnings contained in that user manual, prior to using the FLYSURFER product in any way. You additionally agree that you will ensure any additional or subsequent user of your FLYSURFER product will read and understand the entire FLYSURFER product user manual, including all instructions and warnings contained in that user manual, prior to allowing that person to use your FLYSURFER product.

Assumption of Risk

FLYSURFER product and any of its components involve certain risks, dangers, and hazards that can result in serious personal injury and death to both the user and to non-user third parties. In using this FLYSURFER product, you freely agree to assume and accept any and all known and unknown risks of injury and you and third parties while using this equipment. The risks inherent in this sport can be greatly reduced by abiding by the warning guidelines listed in this user manual and by using common sense.

Claim Wavier

Release and waiver of claims in consideration of the sale of the FLYSURFER product to you, you hereby agree to the fullest
extent permitted by law, as follows:

To waive any and all claims, that you have or may in the future have against Skywalk GmbH & Co. KG and all related parties resulting from use of the FLYSURFER Product and any of its components. To release Skywalk GmbH & Co. KG and all related parties from any and all liability for any loss, damage, injury or expense that you or any users of your FLYSURFER product may suffer, or that your next of kin may suffer, as a result of the use of the FLYSURFER product, due to any cause whatsoever, including negligence or breach of contract on the part of Skywalk GmbH & Co. KG and all related parties in the design or manufacture of the FLYSURFER product and any of its components. In the event of your death or incapacity, all provisions contained herein shall be effective and binding upon your heirs, next of kin, executors, administrators, assigns, and representatives. Skywalk GmbH & Co. KG-related parties have not made and expressly deny any oral or written representations other than what is set forth herein and the FLYSURFER User's Manual.

If you have any questions (repair, replacement parts installation, tuning, etc.) the dealers you trust get faster help and correspondingly cheaper support (e.g. by saving shipping costs).

You can find all dealers in your area via our partner map: https://flysurfer.com/fs-partner/

If you need further help, you can reach us at headquarters by phone or email. E-Mail: support@flysurfer.com Phone: +49 (0) 8641 6948 0





FLYSURFER Kiteboarding Brand of Skywalk GmbH & Co. KG Windeckstr. 4 83250 Marquartstein, GERMANY

For further information please visit: www.flysurfer.com



USER Manual Fox

Version 09-2023

01 PRODUCT OVERVIEW

The FOX's clever design ensures easy set-up, excellent handling, and a swift self-relaunch. Let your child's imagination take flight as they learn to fly the FOX kite, even in gentle breezes, creating cherished memories of outdoor fun and exploration.





HIGHLIGHTS: 3-Line Safety System Swift Self-Relaunch Durable and fun

03 LAUNCHING

• Stand in a position so that your flying lines are about 45 degrees to the wind direction. Check if the area is clear.

2 Before launching check if the 3rd line attached to the wrist leash runs freely.



4 Actively steer the kite by pulling left or right once is rises.

02 SETTING UP

• Secure your kite on the ground.



3 Open the wrist leash and put it on your arm.



2 Sort the bridle lines and check the flyinglines.





3 Walk backward and pull simultaneously at the control bar.

04 SAFETY SYSTEM

• In case of emergency or if you take a break, let go of the bar. The bar will slide towards the kite along the safety leader line attached to your wrist leash.



2 The kite loses power and will stall until it hits the ground. Wait till the kite sits firmly before taking any further action.















05 RELAUNCH

1 Grab the bar while still holding onto the saftey leader line. Steer to eitherside to flip the kite.



2 Untwist the lines if necessary. Make sure the orange side of the bar is on your left. Let go the safety leader line and grab the bar with both hands.

06 CARE

FLYSURFER kites are very durable and very UV and saltwater resistant. With proper care, your kite may last even longer. Eventual color changes of the cloth can be caused by environmental causes, UV-exposure, mechanical strain as well as it getting dirty. A color change has no influence on the flight characteristics whatsoever and is not covered by warranty.

• Do not leave the kite exposed to the elements.

• Keep your kite dry and clean.

• Check all parts of the kite before each use.

07 TRIMM

The safety leader line shortens over time in relation to the steering lines. The knot ladder can compensate it at the upper end of the safety leader line.