

USER MANUAL ERA

CONTENT

01	Safety Notes	3
01.01	Do not fly with kites	
02	Overview of the kite	. 4
03	Handling	
03.01	Inflating the L.E.I kite	6
	Securing	
03.03	Connecting the bar to a L.E.I Kite	6
04	Launching	7
04.01	Wind window edge with helper on the L.E.I kite	7
05	Relaunch	7
05.01	Reverse Launch on L.E.I kite	
05.02	With 1 steeringline on a L.E.I. kite	8
06	Landing with a helper	8
07	Safety System	. 9
07.01	Reactivating the kite	9
08	Packing Up	. 9
09	Emergencies	10
10	Kite Care	10
11	Maintenance	
11.01	Repairing the Cloth	11
12	Trimming	11
12.01	Ontimum trim of the flying lines	11

ENGLISH

01 SAFETY NOTES

Read the entire Gear Guide online thouroughly before using the kite, and strictly confirm to the procedures noted. The following safety quidelines are only guidelines and do not claim to cover every instance.

- 01. Kitesurfing is a potentially dangerous sport, that holds risks for the athlete or the people surrounding them. Incorrect use of this product may result in serious injury or even death for the user or third parties. Every user should be qualified by a FLYSURFER kiteschool or a FLYSURFER dealer.
- 02. The user carries the sole responsibility for themselves and third parties when using this product. The user must check their equipment for wear, especially wearing parts, before each kite session. Do a test activation of your quick release before every launch. This will ensure the system is working and reinforces the release instinct of the kiter.
- 03. The product may only be used with original spare parts, and may not be modified.
- 04. This product has been designed for riders weighing 40-120kg. We cannot guarantee the proper functioning of the product outside of this weight range.
- 05. Never kite in unsuitable conditions such as storm fronts, lightning, or offshore winds. Check the weather and wind conditions carefully and choose the according to kite size.
- 06. Check out the kiting spot beforehand. Make sure you are aware of any risks such as obstacles, shallows, currents and bans. Also be aware if a rescue craft can get to you in case of an emergency. It is always best to ask people (locals) who know the area well.
- 07. Keep a safety margin of at least two line-lengths downwind of you, and never kite near people or obstacles. Kiting near powerlines, roads, airports, cliffs, etc. is extremely dangerous.
- 08. Make sure that someone is looking out for you and that help is there if you need it. Never go out alone. Never kite further away from shore than you can swim back.
- 09. The incorrect usage of lines creates a high risk of injury for yourself as well as others. Body parts that get caught in the lines of the kite may suffer from severe injury or burns.
- 10. Only use bars with a safety system that you can open in emergency situations. Use a guick-release kite leash so that you can disconnect your body from the product in case of an unforeseeable emergency.

01.01 Do not fly with kites

A kite is not designed, tested or licensed as an aircraft or flying device. The use of a kite as a flying device is illegal and not covered by insurance. Flying with this product can lead to death!

02 OVERVIEW OF THE KITE



ENGLISH

1 PULLEY ASSISTED 6-POINT BRIDLE SYSTEM

The 6-point bridle system, supported by pulleys, affects the twist and balance of the kite. Pull tighter loops and rely on high stability in gusty winds. It also improves the relaunch and makes it accessible. The movable bridle anchor points avoid tension peaks by distributing forces optimally to the leading edge. The spliced lines offer maximum security without tangles or snags while also minimizing drag. The bridle system can be easily removed and replaced.

2 DACRON LEADING EDGE - DESIGNED WITH DURABILITY IN MIND

We stay true to the most trustworthy and tested materials on the market so you can feel secure in pushing the limits. The durable Dacron leading edge and reinforced construction holds its shape over time, promising reliable performance even with heavy use.

10 D2 CANOPY WITH FEWER PANELS

Reducing the sail segments saves weight and allows the air to flow cleanly over the canopy, generating more lift. A lighter kite flies faster and is more reactive, and the ERA delivers efficient acceleration through the wind window, converting speed into altitude.

FREE FLOW VALVE

The Free Flow Valve allows for maximum air flow and user-friendliness. The valve is conveniently opened or closed with the push of a button, enabling fast, effortless inflation or deflation. The Free Flow Valve can be easily replaced with a tool.

6 FREE FLOW SYSTEM

The Free Flow System is the connection of the Front Tube to the Struts. The locations of the connecting tubes have been chosen to ensure that the kite can be deflated quickly.


03 HANDLING




A kite needs to be secured properly even if the wind is light. A runaway kite can be a serious danger to people downwind.

03.01 Inflating the L.E.I kite

• Lay the kite out on a surface free of hard or sharp objects. Turn the kite with the leading edge into the wind. The bottom side of the kite turned up. Weigh the wingtip down with a suitable object (kiteboard, sand, etc.).

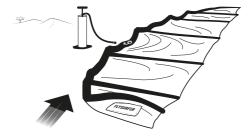

② Look to see if the check valve is closed. If it is not, then press the pin – this should then visibly stand out of the valve.

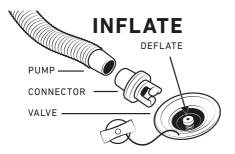

Onnect the pump leash with the kite. Inflate the kite until all struts and the leading edge are firmly inflated and then close the valve. Please observe and follow the PSI guidelines.



03.02 Securing

• Turn the kite around so that the leading edge lies on the ground and points into the wind. Weigh the kite down with sand or any other soft and heavy object.



03.03 Connecting the bar to a L.E.I Kite

• Unwind the bar and sort the flight lines. Check these for damage and knots.



② Start at the leading edge and sort the bridle lines. Then connect your grey front lines with a larkshead at the end of the bridle line as shown in the picture. Attach your colored backlines with a larkshead with the colored pigtail to the tip of the kite.




04 LAUNCHING


Please check not only the wind and weather conditions, but also all your equipment, especially the safety system before launching. Do not use any kite outside of its recommended upper wind range. When launching in strong winds, we recommend that you have an assistant holding you from the back of your harness. During launching, always pay attention that your brilde lines do not get caught on anything or become tangled.

04.01 Wind window edge with helper on the L.E.I kite

• It is important that your helper is experienced with this technique and you have explained them how it's done. Position the kite and helper exactly on the edge of the window.

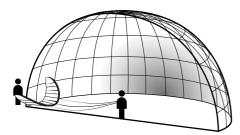

② Pick up the bar and signal the starting helper that he can raise the kite in a C-shape with the front tube facing the windward side. Make sure all lines are clear and your helper is in the right position. If you feel a steady pull in the kite, give the helper the sign to let go.

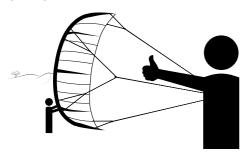


Note: Get aligned with the wind, the helper retains his position and is not moving around.


05 RELAUNCH

05.01 Reverse Launch on L.E.I kite

 
• Grab the leader lines above the floaters as high up as you can. Make sure that the bar is the right way up, e.g black side of the bar on the left. Do not cross over your hands.




② Pull in both leader-lines as far towards yourself as possible to reverse the kite off the water. Strong pulls or pumping the lines may help in light winds. If the kite does not release from the water, grab the leader lines higher up.

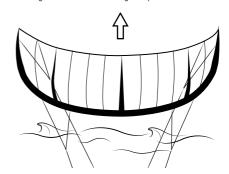

(3) When the kite is at least one wingspan above the water, let go of one of the leader lines. Make sure you keep hold of the other one and the bar is in the right position.

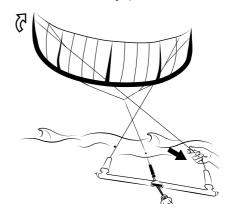


◆ The kite will now spin around. As soon as the leading edge of the kite points up let go of the remaining leader line and put your hand back on the bar. Depower the kite till its back in the sky towards the zenith.

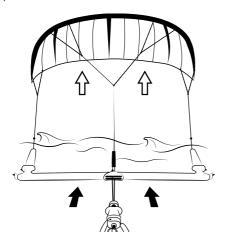

05.02 With 1 steeringline on a L.E.I. kite

• Pull on one leader-line and keep pulling until the kite launches at the edge of the wind window. As soon as the leading edge of the kite points up put your hand back on the bar. Depower the kite till its back in the sky towards the zenith.

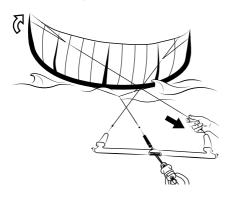


06 LANDING WITH A HELPER

• Signal a helper who knows how to land your kite, that you want to land. The helper should be standing well upwind of the kite.




② Lower the kite towards the helper along the edge of the wind window. The helper can now approach the kite and grab hold of the leading edge of the kite.

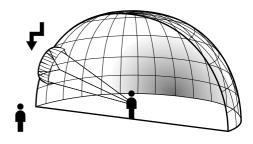

!!! Warning: The helper should never grab any lines.


③ Walk towards the helper and pull hard on the leeward side steering line as soon as they have the kite securely in their hands. That way the kite will flag out downwind of the helper.

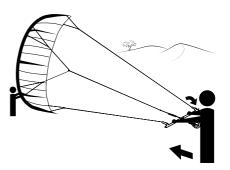

4 Secure the kite as described in "Securing the Kite".

07 SAFETY SYSTEM

• The ERA kites are equipped with a Frontline Safety (FLS). After triggering the Quick Release, the Control Bar will slide up to the stopper ball / knot.

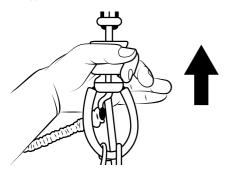

2 The kite will flag out on this single front line.

07.01 Reactivating the kite

After triggering it, it is possible to reassemble the Quick Release while on the water and start the kite again.

We recommend reading our Bar Safety Guide in detail!

• Work your way up the safety endline until you get to the control bar. When you reach the bar, secure the endline to your harness hook. Now the guick release can be reset with both hands.

 


② Hook in the chickenloop and secure it with the chickendick. Slowly release the endline bit by bit. Make sure that it has not wrapped itself around any part of your body. Do not let the endline slip too quickly through your fingers to avoid getting burns or cuts.


Tip: It can happen that the kite tangles after flagging out. If this cannot be solved by pulling on the steering lines, you can try to solve the problem by flagging out the kite again.

08 PACKING UP

• Wind the lines as shown in the illustration around the bar until you get to the mixer. Secure the lines with the elastics or a half hitch



2 Empty the air from the kite using the Free Flow Valve. To do this, push in the pin of the check valve.

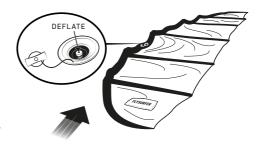

3 Roll the kite up from both wingtips to the middle. Fold the kite and store it in the kite bag.



09 EMERGENCIES

In an emergency situation it is important not to panic, and to react purposefully and goal orientated.



Especially in very gusty conditions the kite can overfly its pilot. This can be corrected by powering up the kite by pulling the bar towards you or pulling in the leader lines. It is also possible to counter the kite's overflying, or get it back into the wind window by flying it back and forth.



Should the center of the kite collapse towards the pilot (e.g frontstall) it is important to activate the quick release before it opens again, as the kite can develop a lot of power when it opens again in the wind-window.



A backwards flying kite (backstall) can be recovered by depowering (pushing the bar towards the kite). In very light winds you can grab hold of the adjuster and give short effective pulls to accelerate the kite.



If one is in danger of drifting away from the shore with an un-relaunchable kite, then it may be prudent to abandon the kite and swim back to shore if possible. Otherwise it is wise to stay with your kite, as it will make you easier to spot for rescuers. Caution: It is very easy to get caught up in the bridle lines that are floating around. Avoid unnecessary swimming movements. A line knife in your harness is a very useful tool in a worst case scenario.

10 KITE CARE

FLYSURFER kites are very durable and very UV and saltwater resistant. With proper care, your kite may last even longer. Eventual color changes of the cloth can be caused by environmental causes, UV-exposure, mechanical strain as well as it getting dirty. A color change has no influence on the flight characteristics whatsoever and is not covered by warranty.

Do not leave the kite exposed to the elements.

People who pack away their kite right after a session, or for a longer break, will minimise the amount of time the material is exposed to the sun and flapping in the wind, extending the "active" lifespan of their kite.

Drying

If a kite is packed away wet and left for a long period of time it can develop ugly mildew spots, rust on the metal parts or color bleeding of the cloth. This does not effect how the kite performs, but will reduce the value of your kite. In extreme cases the kite may get mouldy. To dry, simply continue to fly the kite until the canopy is dry.

Rinsing

Rinse your kite from time to time with clear water, after using it in salt water, and leave it to dry in the shade. Do not use any detergents. The warranty will be void after the use of detergents on the cloth.

Check

Check all parts of the kite before each use. Especially parts that can wear out. Material failure on those parts can lead to further damages, or put the kiter at risk.

ENGLISH

11 MAINTENANCE

The main parts that wear on the kites are the Depower Line, the Safety Endline (see the bar manual), as well as the Sparepart Lines and the pulleys. Depending on use, the flying lines and other parts will need to be replaced within the lifespan of your kite. If you do not service these parts, it can lead to damage to the kite and will void the warranty.

11.01 Repairing the Cloth

In case you get a small tear (e.g. through contact with a sharp object) we have included a repair kit with your kite. The area that needs repair must be clean, dry, and grease-free. Temporary repairs are possible with spinnaker repair tape. Tape the tear from the inside of the kite. We recommend that you round off the edges of the repair tape. We offer professional repair done by the FLYSURFER in-house workshop. We can exchange parts of the canopy, without a trace of the damage.

Tip: When a tear is close to a seam (less than 5cm), we recommend using sewing to repair the damaged area.

12 TRIMMING

12.01 Optimum trim of the flying lines

Steering (back) lines shorten over time in relation to the flying (front) lines. The back line can be shortened or extended under the floaters by using knots. Extension of the back lines is necessary when the trimmer needs to be pulled in too much to keep the kite flying usually in its intended wind range. (backstall tendency).



FLYSURFER Kiteboarding Brand of Skywalk GmbH & Co. KG Windeckstr. 4 83250 Marquartstein, GERMANY