

## Free Flow 2.0 Valve replacement for BOOST2

For the replacement you need a yellow valve and as well a valve wrench.



### 1. Valve demounting

|  |  |
|--|--|
| <p>Unscrew the valve anticlockwise with the valve wrench</p> |   |
| <p>Remove the valve from the basement</p>                    |  |



## 2. Valve installation

|  |  |
|--|--|
| <p>Insert new valve with valve lid and valve wrench into the basement</p>  |    |
| <p>Screw the valve with the valve wrench clockwise into the basement.</p> <p><b>Warning:</b><br/>Please make sure that the ring of the valve lid isn't in the thread of the basement.<br/>Due to this pay attention to the bladder because it can get caught in the thread of the basement</p> |   |
| <p>The valve should be hand-screwed in the basement. Please check if the valve is screwed exactly in the basement. Therefore the distance between the valve and leading edge tube needs to be the same all around the valve.</p>   |  |
| <p>Finished attached valve with valve lid</p>  |  |

