

HOW TO EXCHANGE THE QUICK RELEASE 2.0?






1. Lay out the bar


2. Move stopper ball down

3. Move neoprene knot cover up

4. Free the ends of the depowerline. Do NOT undo knot

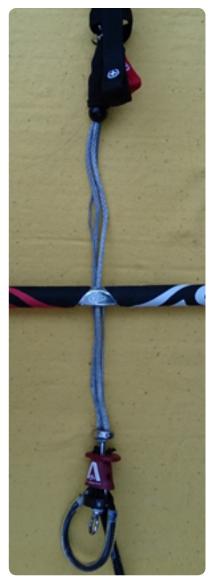



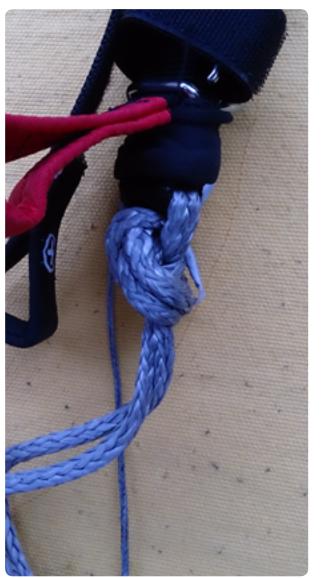






5. Mark positions of the knot as shown with marker, to preserve trim of the bar

6. Mark middle position of line at QR

7. Undo knot at trimmer

8. Pull out depowerline and stopperball

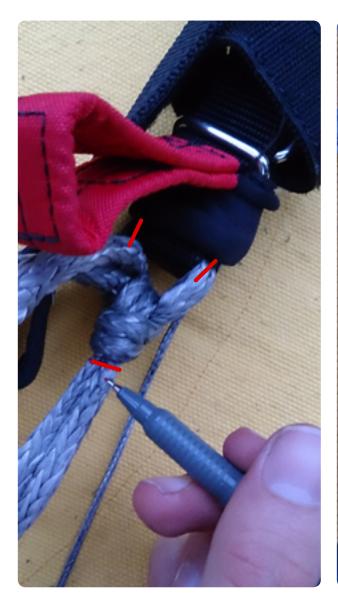









9. Pull out depowerline from QR

10. Untie the safety ring

11. Ready for changing the QR!

12. Change the QR











- 13. Prepare to pull safety line through QR: Toothfloss, a bridle line,... any thin line can be used. Pull thin line through the hole in the QR.
- 14. Pull thin line through the safety line loop
- 15. Pull thin line through the QR in the other direction
- 16. Pull safety line through QR using the thin line











17. Put on the safety ring

18. Pull depower rope through holes in the QR, then through the bar holes

19. Align center mark














20. Put on stopper ball



21. Pull depowerline through trimmer, matching the markers.

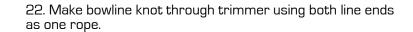



23. Make sure bowline knot is aligned with markings, before pulling tight.

Stuff away the ends of the depowerline in the neoprene trimmer cover whilst pulling it down.



24. Ready to go out and kite!



